

Weber Parts and Accessory Cross Reference

Old Ace #	Old Weber #	New Ace #	New Weber #	Description
8138596	16128	8210874	6408	Poultry Roaster
8012528	1644	8211120	6421	12" Grill Brush
86821	1647	8211062	6422	18" Grill Brush
8201881	1683	8211245	6424	21" T-Brush
86443	2501	8210783	6405	Shish Kabob Set
80052	3300	8211005	6415	Small Drip Pans
86942	3301	8211013	6416	Large Drip Pans
New SKU	3400	8213357	6417	Summit 6 Burner Drips Pans
84894	3601	8210858	6406	Rib Rack
86445	9501	8210866	6407	Roast Holder
New SKU	18800	8211211	7415	Wood Chip Soaker
8201873	32911	8211237	6409	Salt & Pepper Shakers
8109225	18600	8211252	6420	3 Piece SS Tool Set
87275	9815	CLOSE-OUT - NO REPLACEMENT		
84896	1201	8211559	7401	Tool Holder
81935	1800	CLOSE-OUT - NO REPLACEMENT		
84895	3901	8211641	7402	Charcoal Rails
8012510	87886	8211369	7416	Chimney Starter
8014110	9600	8211450	7403	Charcoal Briquet Holders
81939	70301	8211658	7431	14.5" Cooking Grate
86943	70601	8211716	7432	18.5" Cooking Grate
86944	70901	8211724	7435	22.5" Cooking Grate
8012544	70615	8211732	7433	18.5" Hinged Cooking Grate
8004053	70915	8211740	7436	22.5" Hinged Cooking Grate
88027	72201	8211781	7439	14.5 Charcoal Grate
86945	72501	8211849	7440	18.5" Charcoal Grate
86946	72801	8211906	7441	22.5" Charcoal Grate
88028	3975	8212250	7417	Weber FireStarters
87273	9890	8211914	7517	Gas Rotisserie
8120578	9891	CLOSE-OUT - NO REPLACEMENT		
8099806	9867	8211948	7523	Gas Cooking Grates
8137051	9885	8212011	7521	Gas Cooking Grates
8004038	9860	8211963	7525	Gas Cooking Grates
8100372	9869	8212086	7527	Gas Cooking Grates
8099814	9811	8210841	7534	PE Flavorizer Bars
8137044	9886	8212110	7535	SS Flavorizer Bars
8012569	9814	8212128	7538	SS Flavorizer Bars
8120255	9817	8212144	7536	PE Flavorizer Bars
8107732	9816	8212227	7537	SS Flavorizer Bars
New SKU	9940	8214819	7539	PE Flavorizer Bars
New SKU	9938	8214827	7540	SS Flavorizer Bars
New SKU	9937	8214835	7524	Gas Cooking Grates
New SKU	9939	8214777	7528	Gas Cooking Grates
New SKU	9950	8212243	7519	Gas Rotisserie
8187304	18700	8212284	6445	3 Piece Weber Style Tool Set
8201857	18702	8212326	6441	Weber Style SS Tongs
8201832	32902	8212433	6434	Weber Style SS Veg Basket
8201840	32903	8212441	6435	Weber Style SS Grill Pan
8201865	32905	8212458	6443	Weber Style Large Turner
8203424	32906	8212466	6446	Weber Style SS Fish Turner
6108112	32908	6135933	6438	Weber Style Digital Thermometer
84002	4301	8213548	7450	18.5" Standard Cover

86940	4701	8213571	7451	22.5" Standard Cover
86049	7701	8213605	7453	22.5" Premium Kettle Cover
8192429	9986	8213639	7455	Performer Cover
8012551	9934	8213647	7550	Gas Cover
8003964	9935	8213712	7551	Gas Cover
8003972	9936	8213738	7552	Gas Cover
8201782	9985	8213746	7553	Gas Cover
8201790	9988	8213837	7554	Summit 400 Series Cover
8201808	9989	8213845	7555	Summit 600 Series Cover
8195430	62101	8212664	7516	Gril Handle Light
7104516	9062	CLOSE-OUT - NO REPLACEMENT		
7107501	9054	CLOSE-OUT - NO REPLACEMENT		
8165904	3602	8212680	7501	Genuine Part -Hose & Regulator
8165912	3603	8212698	7502	Genuine Part -Hose & Regulator
8165938	3604	CLOSE-OUT - NO REPLACEMENT		
8165946	3605	CLOSE-OUT - NO REPLACEMENT		
8166019	3609	8212730	7506	Genuine Part - SS Burner Set
8166027	3610	8212789	7507	Genuine Part - SS Burner Set
8166035	3611	8212797	7508	Genuine Part - SS Burner Set
8166076	3612	8212813	7509	Genuine Part - Igniter Kit
8166084	3613	8212847	7510	Genuine Part - Igniter Kit
8166092	3614	CLOSE-OUT - NO REPLACEMENT		
8166134	3617	8212862	7409	Genuine Part - 22.5" Cleaning Kit
8166142	3618	CLOSE-OUT - NO REPLACEMENT		
8166159	3619	8212870	7405	Genuine Part - Charcoal Handles
8166167	3620	CLOSE-OUT - NO REPLACEMENT		
8166175	3621	CLOSE-OUT - NO REPLACEMENT		
8166191	3623	8213001	6414	Genuine Part - Casters
8166324	3631	8213266	7513	Genuine Part - Warming Rack
8166332	3632	CLOSE-OUT - NO REPLACEMENT		
8166340	3633	8213290	7514	Genuine Part - Warm-Up Basket
8166357	3634	CLOSE-OUT - NO REPLACEMENT		
8166365	3635	CLOSE-OUT - NO REPLACEMENT		
8166373	3636	8213308	7407	Genuine Part - 22.5" Ash Catcher
8166381	3637	CLOSE-OUT - NO REPLACEMENT		
8166407	3639	CLOSE-OUT - NO REPLACEMENT		
8166415	3640	8213332	7515	Genuine Part - Genesis Catch Pan
8166043	3643	CLOSE-OUT - NO REPLACEMENT		
8164956	41429	8213910	6507	Weber Q Folding Cart
8192411	54601	8213951	6508	Weber Q Stationary Cart
8166449	16142	8213985	6509	Weber Q100 Duffle Bag
8164931	16143	8214009	6510	Weber Q200 Duffle Bag
8164964	9895	8214017	6551	Weber Q200 Cover
8166456	9907	8214025	6550	Weber Q100 Cover
8198517	9933	8214033	6553	Weber Q300 Cover
8166423	3666	8212599	6501	Weber Q Adapter Kit
8201204	1432	8214041	6504	Weber Q100 Griddle
8201196	1431	8214058	6505	Weber Q200 Griddle
8207631	16138	8212524	6511	Weber Q 2 Piece Tool Set